



Location of condenser, Fresh Air and Exhaust Hoods for ERV in back corner of space



No Penetrations