



Expeditor/Install Pictures with Direction

Rappe- Job #34810



- The idea is to keep bottom and top skirting (if possible) and re-install new Bay's/Bow, providing protection matches up half way decent!!
- we will have mark on stand by increase the plan changes

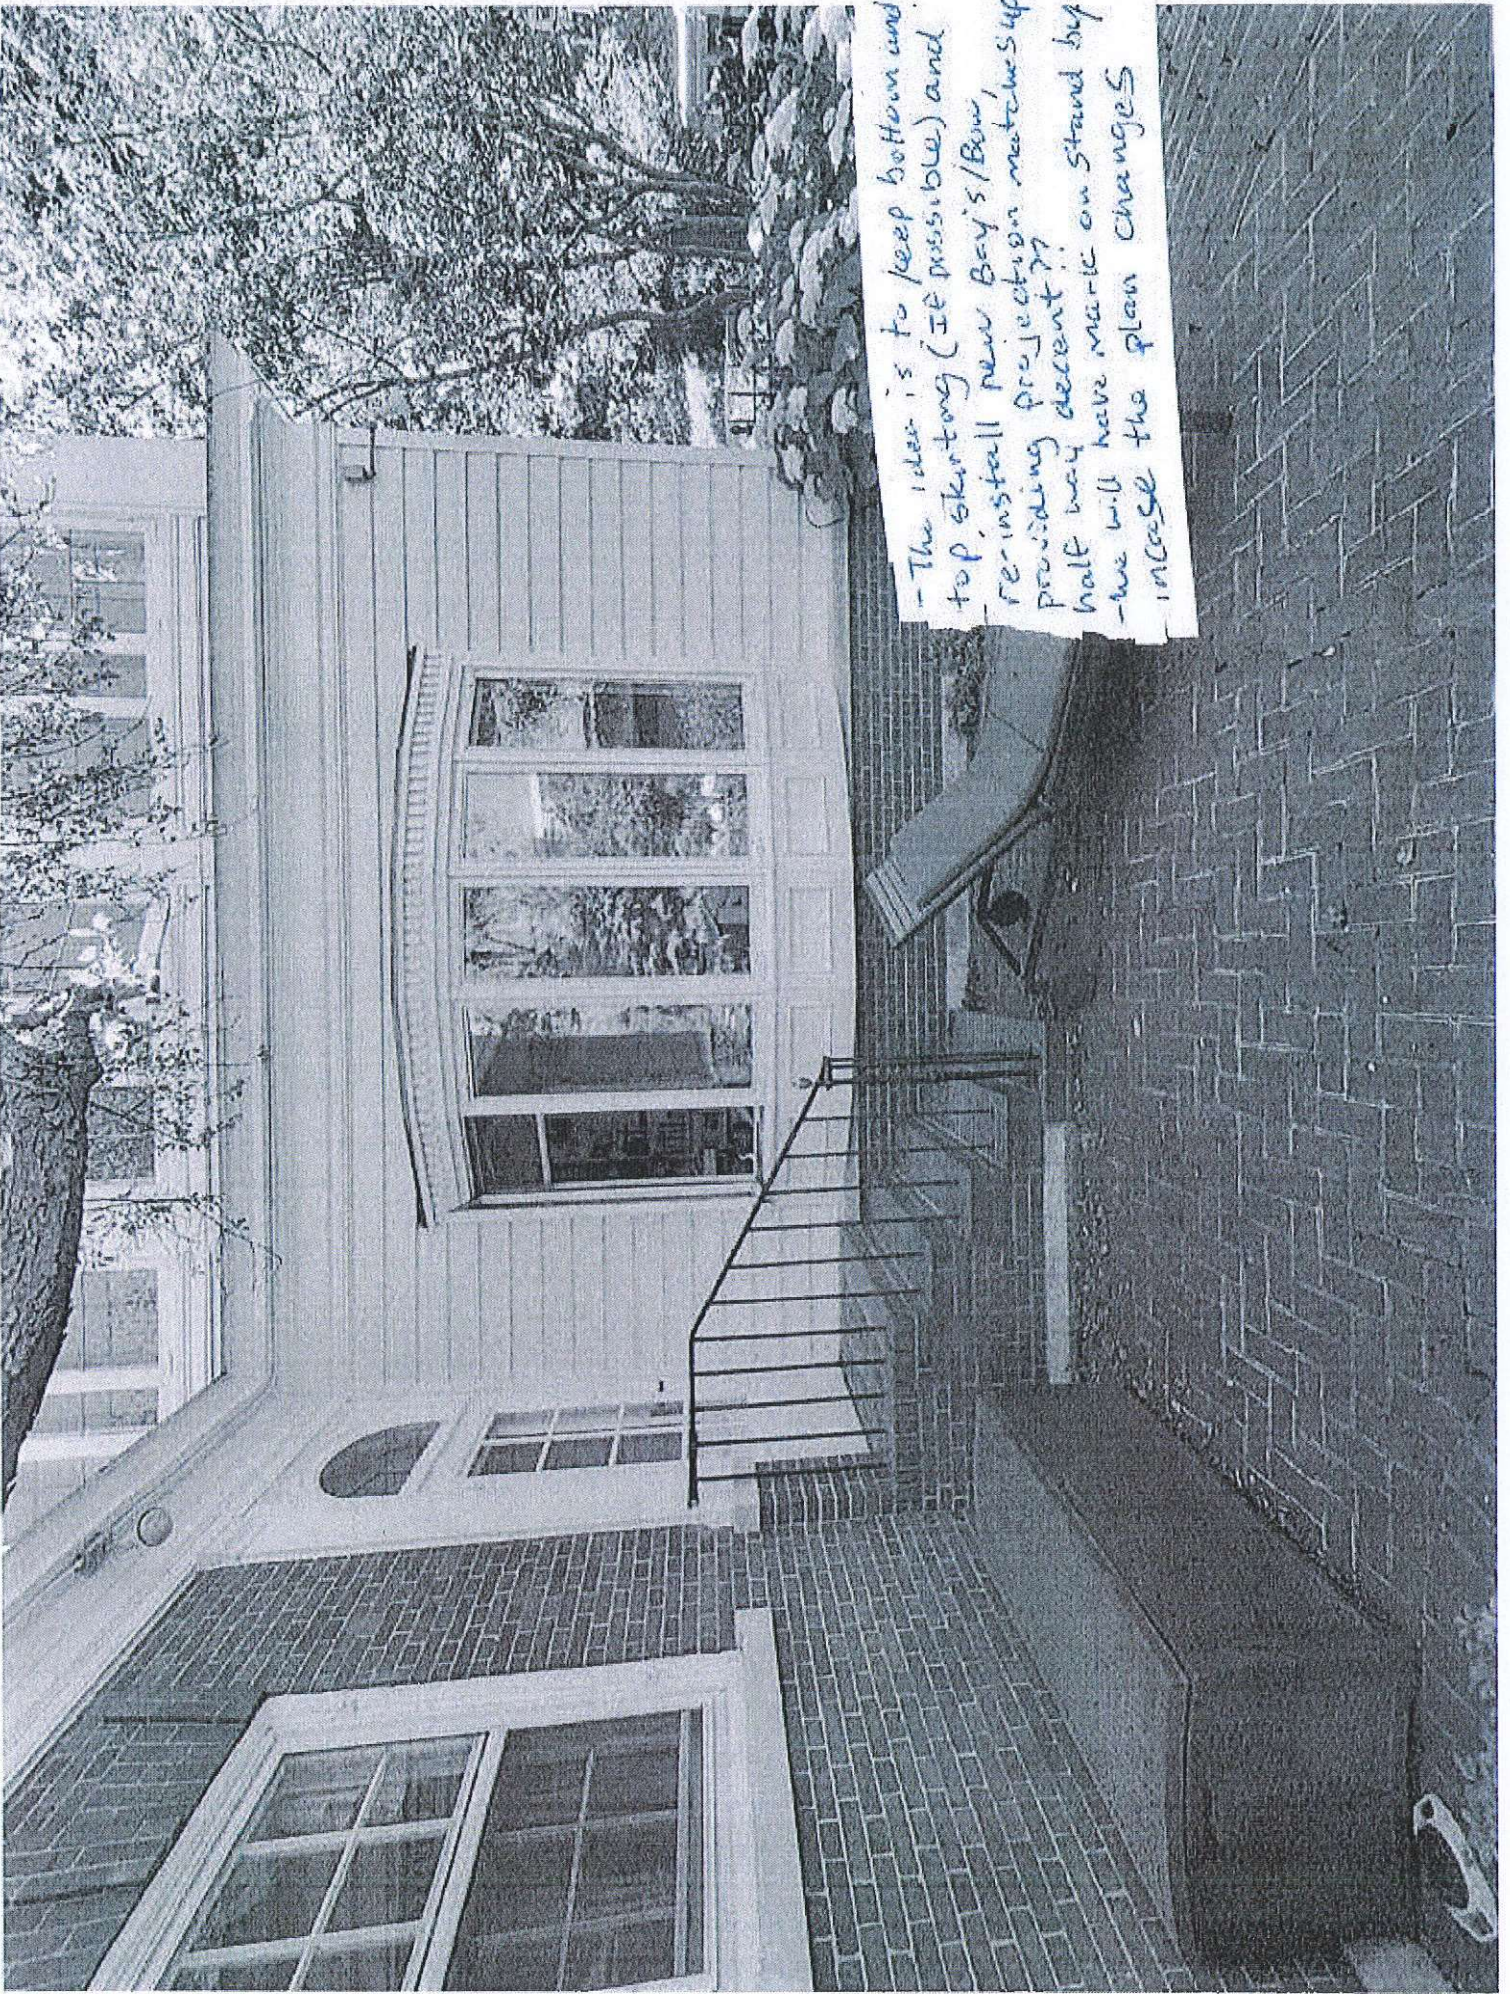

- Duplicate look of
existing Bay/Bay - Sent
Charm-fail

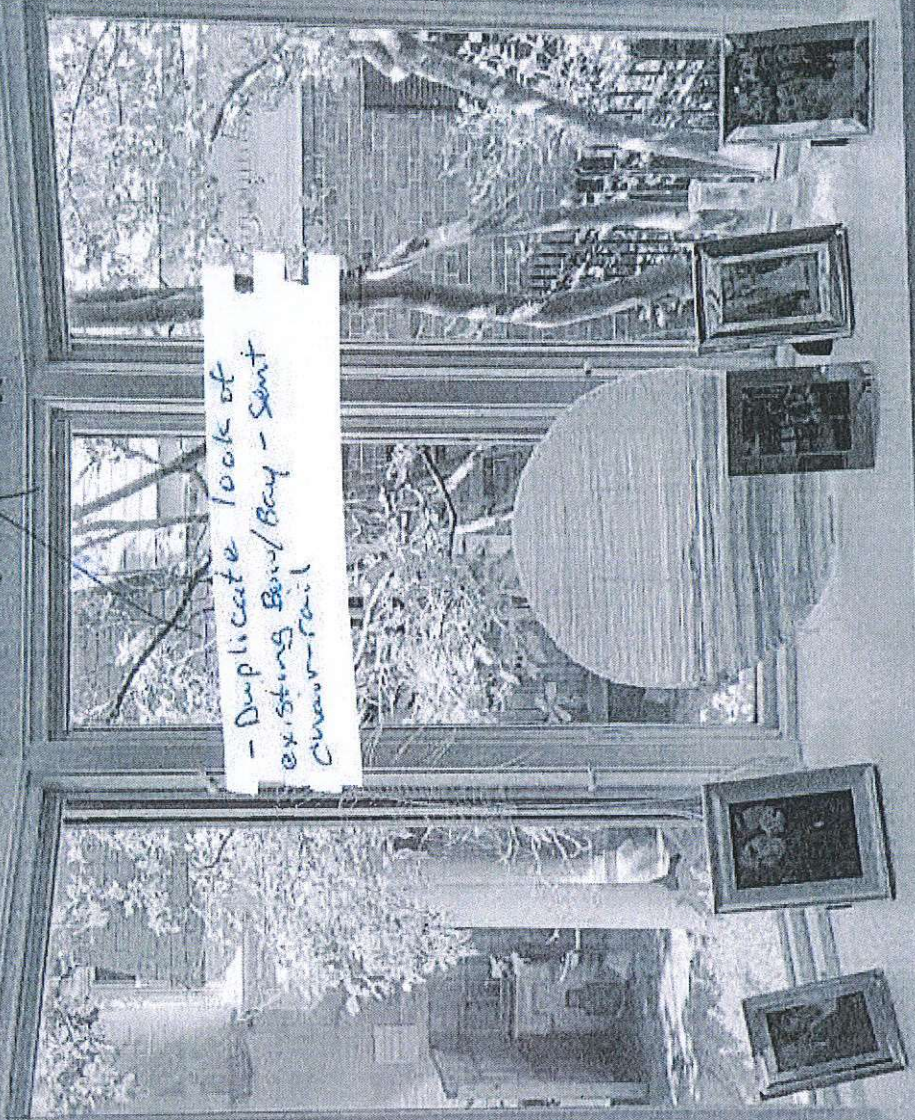

windain's measurements
to fit inside after
Shoe is removed or
cut out

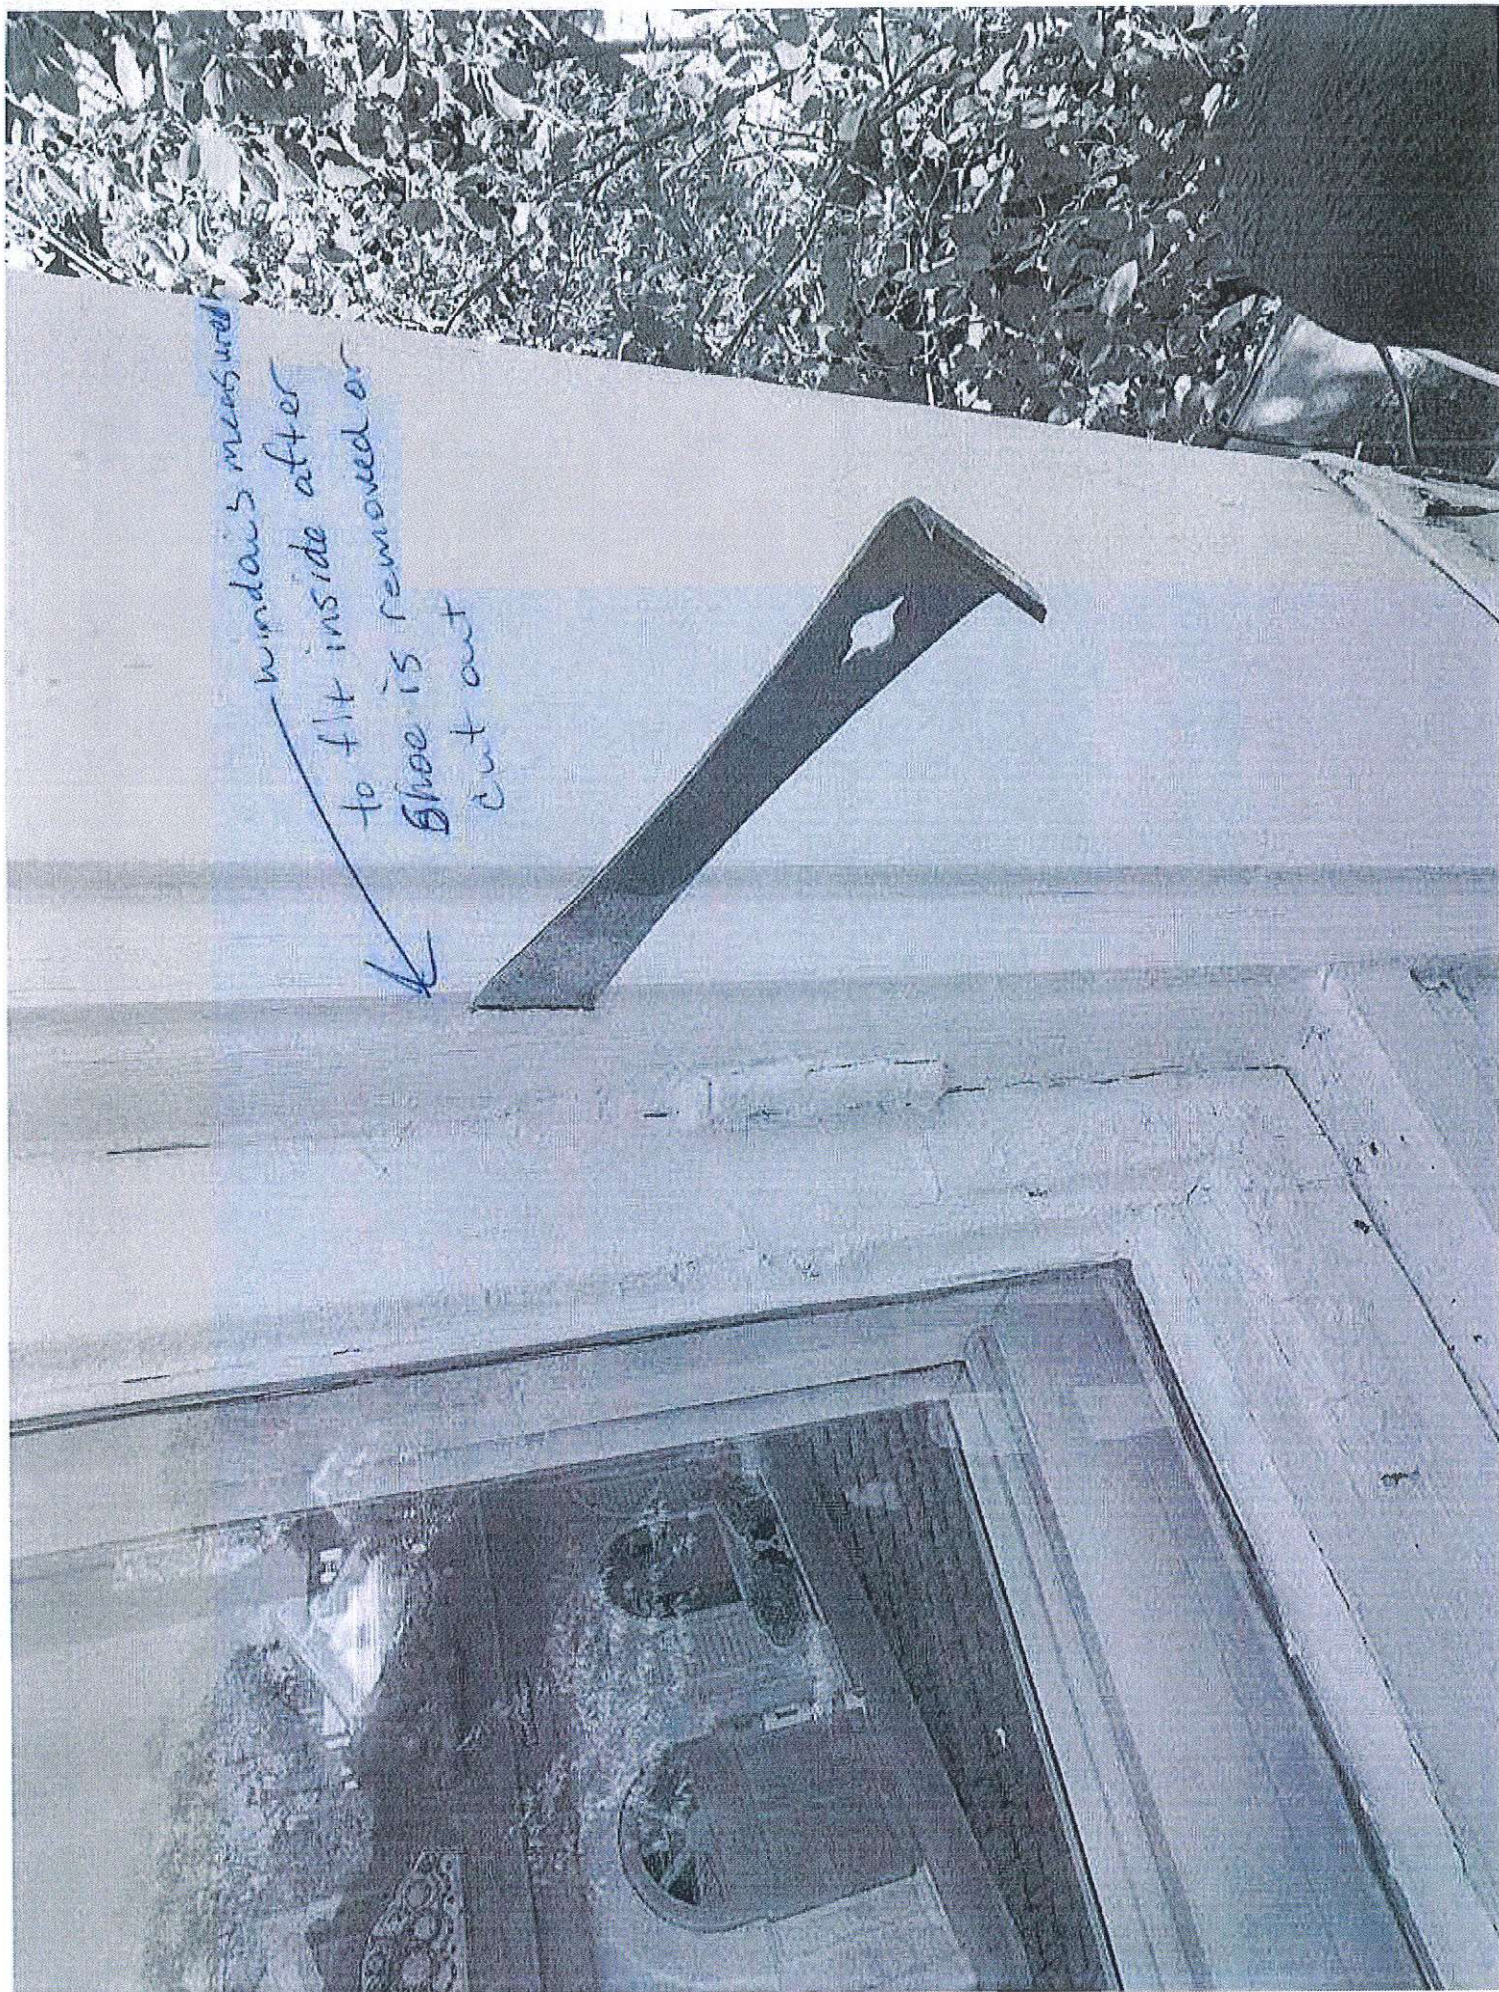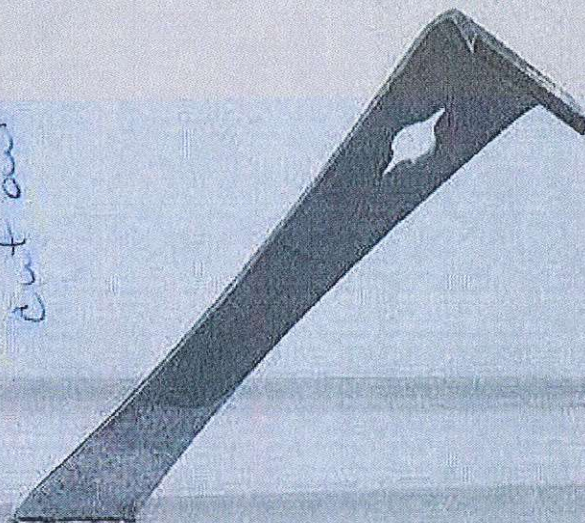

- Window measured
to flush out with Flat
detail around window
casing to set on top of
it

3 1/4" colonial

Remove
corner beads

First Stock for
Bottom

- Gent

~~storm~~ sent 1x4 to layer up
for front door would to get back to paint
under brick ~~new~~ (storm only)

-- For back door I believe Eric E,
accounted for chunky brick mould and
extended jambs for a normal brickmold

